Will the smoke detector trip the WisDom even if it is not armed?

As long as you have the "Zone Type" for the smoke sensor set as "Tire", then it will be active all the time, regardless of whether the panel is armed or disarmed.

Article ID: 1

Last updated: 25 Jan, 2009

Revision: 1

UNRESTRICTED WisDom Information -> Will the smoke detector trip the WisDom even if it is not armed?

 $\underline{http://support.diycontrols.com/index.php?View=entry\&EntryID=1}$