

What device can I call into to hear temperature read to me?

The [Intermediate Freeze Alarm](#) will read you temperature and power status.

The [Deluxe Freeze Alarm](#) will read you temperature, power status and status of two additional sensors if connected to additional inputs.

The [Sensaphone 400](#) can read you temperature and power status along with other conditions if you add more [sensors](#) (flood, smoke, carbon monoxide, humidity, etc.).

Article ID: 103

Last updated: 12 Dec, 2013

Revision: 1

Remote Temperature and Power Monitoring and Control -> What device can I call into to hear temperature read to me?

<http://support.diycontrols.com/index.php?View=entry&EntryID=103>