Where is the IMEI number (serial number) on my AGM?

The IMEI number (serial number) of an AGM is the 15 digit number located on the rectangular circuit board that is connected with a cord to the antenna.

Article ID: 109

Last updated: 19 Nov, 2013

Revision: 1

UNRESTRICTED AGM Information -> Where is the IMEI number (serial number) on my AGM?

 $\underline{http://support.diycontrols.com/index.php? View=entry\&EntryID=109}$